

Switch to DVL- and DVX-Modus

On the underside of the Zoe there is a selector switch for the respective camera –
 L = Lanc (Sony + Canon)
 X = Panasonic (DVX + HVX)



Remark:

No Funktion of LEDs in DVX/HVX Mode!



RECORD

Single click:
 Starts or ends the recording when the main switch on the camcorder is set to "Camera".

Note: Any damage to the adhesive labels voids all warranty provisions.

GREEN LED

Off:
 The camera is switched off or the ZOE is not connected to the camera.

Blinks fast:
 The camera has just been switched on, software is being booted. The Zoomremote is calibrating (do not move the rocker in this phase).

Blinks:
 The camera is switched on, low battery.

On:
 The camera is switched on and ready for recording.

RED LED

Off:
 The camera is not recording.

On:
 The camera is recording.

Blinks:
 No tape in the camera, tape end warning.

YELLOW LED

Off:
 The rocker on the ZOE is in "Zoom Control" function. The camera is in "Manual Focus" mode.

Blinks:
 The rocker on the ZOE is in "Focus Control" function. The camera is in "Manual Focus" mode.

On:
 The rocker on the ZOE is in "Zoom Control" function. The camera is in "Auto Focus" mode.

**MSR®
 MaximumSpeedReduction**

With this new function you can limit the maximum speed of the zoom without losing the pressure sensitivity of the rocker switch. It makes it easier to get slow, smooth and stable zoomdrives.

ON / OFF

Single click:
 Switches the camcorder on or off, when the main switch of the camera is set to "Camera" position.

RECORD

Single click:
 Starts or ends the recording when the main switch on the camcorder is set to "Camera" and the green LED is on. Makes the camera take a photo if the main switch on the camcorder is set to "Photo" and the green LED on ZOE is on.

FOCUS

Single click:
 Activates manual focus mode, no matter whether the camera is presently in manual or in "Auto Focus" mode. The rocker on the ZOE is in Focus control function. The yellow LED blinks slowly. Click again to switch the rocker on the ZOE back to "Zoom Control" function. The camera stays in manual focus mode.

ADDITIONAL FUNCTIONS SONY CAMERAS AND CANON XM2 ONLY

Double click:
 Switches the camera from "Manual Focus" mode to "Auto Focus" mode and back again with another double click

Long push:
 Operates the "Push Auto"- function of the camcorder.

INVERT ZOOM DIRECTION

To invert the zoom direction on the ZOE-DV-LANC, switch on the camera and push the "Focus" button while the camera is booting, until the yellow LED makes a short flash.